AUDIOLINE

Telefon
Telephone

Bedienungsanleitung
Operating Instructions

TEL5 clip

- Contents -

1 General Information 19
1.1 Intended use 19
1.2 Installation location 19
1.3 Private branch exchanges 19
1.4 Information on disposal 20
1.5 Temperature and ambient conditions 20
1.6 Cleaning and upkeep 20

2 User Controls 21
2.1 Inside the receiver 21
2.2 Upper side of receiver 21
2.3 Underside of base unit 22
2.4 Inside of base unit 22

3 Setting up 23
3.1 Safety Information 23
3.2 Check contents of pack 23
3.3 Connecting the receiver 23
3.4 Fitting the batteries 23
3.5 Connecting the telephone 23
3.6 Wall mounting 24
3.7 Adjust date and time 24

4 Operation 25
4.1 Making a call 25
4.2 Receiving calls 25
4.3 Call Duration Display 25
4.4 Adjusting the receiver volume 25
4.5 Redial facility 25
4.6 Adjusting the receiver volume 25
4.7 Storing speed dial numbers 26
4.8 Calling up speed dial numbers 26

5 Caller display (CLIP) 27
5.1 Viewing the caller list 27
5.2 Dialling a telephone number directly from the caller list 28
5.3 Deleting telephone numbers from the caller list 28
5.4 Deleting the entire caller list 28

- Contents -

6 Private Branch Exchanges / Supplementary Services 29

6.1 R-button on Private Exchanges 29

6.2 R-button and supplementary services offered by your telephone network provider 29

6.3 Dialling pause 29

7 Important information 30

7.1 Fault finding 30

7.2 Guarantee 30

8 Important Notes on the Guarantee ... 31

1 General Information

Please read this operating instruction manual thoroughly. Under no circumstances open the device or complete any repair work yourself. In the case of claims under the terms of guarantee, contact your sales outlet. We reserve the right to make technical and optical modifications to the product during the course of product improvement.

1.1 Intended use

This telephone has been developed for use when connected to an analogue telephone network connection (PSTN). However, due to the different services offered by the various telecommunication network providers, there is no guarantee that the equipment will function trouble-free on every telecommunication terminal connection. Only connect the telephone line from the telephone to a telephone line socket designed for it. Never change the plug on the connection cable.

1.2 Installation location

Place the telephone on a level, non-slip surface. Normally, the footpads on the telephone do not leave any marks on the surface where it is located. However, due the diverse types of paints and surfaces which come into question, it cannot be fully ruled out that the footpads will leave marks on the surface on which it is located.

1.3 Private branch exchanges

The telephone can also be connected to a private branch exchange. Ask the dealer where your private branch exchange was purchased whether the telephone will function properly on the private branch exchange. There is **no** guarantee that the telephone will work on every private branch exchange.

1.4 Information on disposal

The implementation of European law in national laws and directives obliges you to dispose of consumable goods appropriately. This serves to protect both persons and the environment.

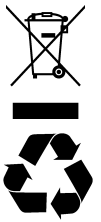

The adjacent symbol indicates that electrical and electronic apparatus no l onger required must be disposed of s eparate from domestic waste.

Equipment which is old or has outlived its service life must be disposed of at a suitable collection point provided by the public waste authorities.

Batteries and power packs must be disposed of at the point of sale or at the appropriate collection points provided by the public waste authorities.

Packaging materials must be disposed of according to local regulations.

1.5 Temperature and ambient conditions

The telephone is designed for use in protected rooms with a temperature range from 10 ˚C to 30 ˚C. The telephone should not be used in rooms exposed to moisture, such as bathrooms or laundries. Do not locate the device in the vicinity of sources of heat such as radiators, and never expose it to direct sunlight.

Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

1.6 Cleaning and upkeep

Clean the housing surfaces with a soft, dry, fluff-free cloth. Never use cleaning agents or solvents. Apart from occasionally cleaning the housing, no other upkeep is necessary. The rubber footpads on the telephone are not resistant to all cleaning agents. The manufacturer is not liable for any claims for damage to furniture or such.

2 User Controls

2.1 Inside the receiver

1. Disconnect button/ receiver rest
2. Speed dial button
3. Store button
4. Connection to base unit
5. R Signal button
6. Redial / Pause
7. Receiver volume adjustment

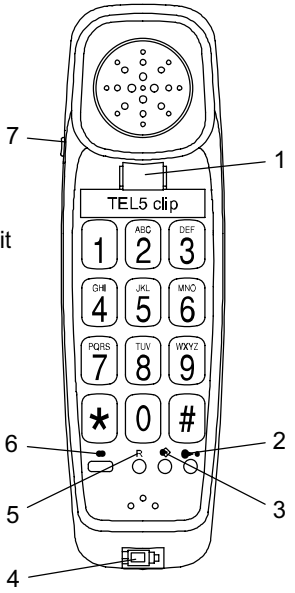

2.2 Upper side of receiver

8. Indicator light for new calls
9. Selector key, down
10. Selector key, up
11. Delete button
12. Dialling from the caller list

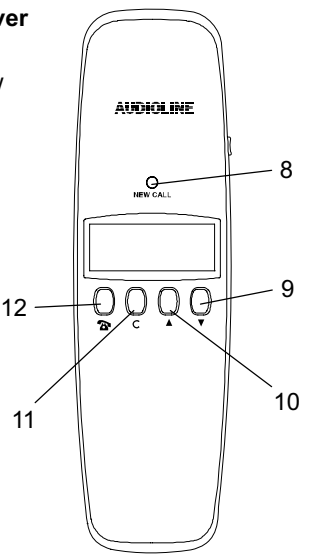

2.3 Underside of base unit

1. Fixing for wall mounting
2. Connection for telephone cable
3. Fixing wall mounting
4. Connection for spiral receiver cable
5. Ringer volume adjustment

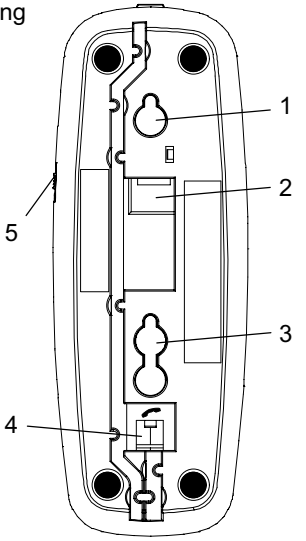

2.4 Inside of base unit

6. Battery compartment

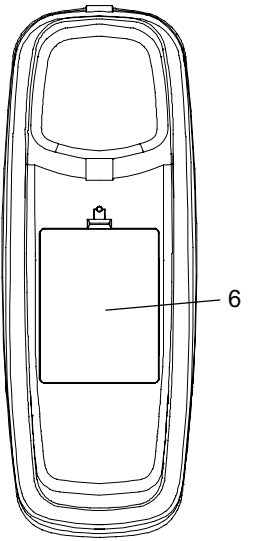

3 Setting up

3.1 Safety Information

Caution: Before setting up, it is essential that you read the General Information at the beginning of this manual.

3.2 Check contents of pack

The following items are supplied:

one telephone base	one telephone receiver
one telephone connecting cable	one spiral cable
one instruction manual	three AA batteries

3.3 Connecting the receiver

After unpacking your telephone, you must first connect the telephone receiver to the telephone base. First take one end of the spiral cable and plug it into the socket at the bottom of the receiver. Turn the telephone over and plug the other end into the lower socket (see Chapter 2, Section entitled Underside of base unit, Item 4.). Bring the cable out via the cable duct.

3.4 Fitting the batteries

Before connecting your new telephone to the telephone network, the batteries should be fitted. Please always use a good type of AA batteries. No messages will be shown in the display if the batteries are not fitted. Before installing or changing the battery, make sure that the telephone is not connected to the telephone network.

1. The battery compartment is to be found on the inside of your telephone base.
2. Open the battery compartment with a small screwdriver or a pointed object.
3. Insert the batteries, ensuring that the polarity is correct.
4. Close the battery compartment.

The battery should be changed when the ⌧ symbol appears in the display. All three batteries must then be changed. If the batteries become discharged, the display will go dark.

3.5 Connecting the telephone

Connect the telephone cable supplied to the telephone socket and the telephone jack on the underside of the

telephone base (see Chapter 2, Section entitled Underside of base unit, Item 2.). Then feed the cable out of the telephone housing through the cable guide either towards the top or the bottom. Secure the cable firmly in the cable duct. The telephone works using the MF system (Tone Dialling).

3.6 Wall mounting

Your telephone is also suitable for wall mounting. Use two screws for fixing to the wall. Drill two holes 85 mm apart, vertically one above the other, and leave the screws protruding 5 mm from the wall. Now place the telephone base over the screws and push down slightly.

When the telephone is mounted on a wall, you can hang the receiver on the telephone without cutting off the call. A small hook is located at the top of the receiver rest for this purpose.

3.7 Adjust date and time

1. Press the button [▲] for 4 seconds.
2. Press the [▲] or [▼] button to set the contrast in the LC display.
3. Confirm with the [c] button.
4. Press the [▲] or [▼] button to set the Recall time (100 ms or 300 ms).
5. Confirm with the [c] button.
6. Enter the current hour by repeatedly pressing the [▲] or [▼] buttons.
7. Confirm with the [c] button. The display jumps to the minutes display.
8. Enter the current minutes by repeatedly pressing the [▲] or [▼] buttons.
9. Confirm with the [c] button. The cursor jumps to the day display.
10. Enter the current day by repeatedly pressing the [▲] or [▼] buttons.
11. Confirm with the [c] button. The cursor jumps to the month display.
12. Enter the current month by repeatedly pressing the [▲] or [▼] buttons.
13. Confirm with the [c] button. This completes the entries and the current data will now be shown in the display.

Note: If the batteries are fully discharged, the time and date must be re-entered.

4 Operation

4.1 Making a call

Your telephone can be used like any conventional telephone.

1. Lift the receiver and wait until you hear the dialling tone.
2. Now dial the required telephone number. The display can show a telephone number with a maximum of 14 digits. If the number dialled is longer than this, only the last 14 digits will be displayed.
3. To end the call, replace the receiver on the rest. You can end the current call by using the disconnect button and you will immediately obtain a new dialling tone.

4.2 Receiving calls

When a call comes through, you will hear the ringing tone. The call can now be accepted using the receiver.

4.3 Call Duration Display

The call duration is shown in the display in minutes and seconds during a call. The indication starts after the number has been dialled. The call duration still remains showing in the display for a few seconds after the call has been ended.

4.4 Adjusting the receiver volume

If the receiver volume is too quiet or too loud for you, you can change this to suit your requirements.

You can adjust the volume from soft ● to loud ⬤ using the **VOL.** slide switch on the receiver.

4.5 Redial facility

If a connection that you have dialled is engaged or you were unable to get through to anybody, simply replace the receiver. The last number dialled remains stored in the telephone automatically. To use the redial facility, proceed as follows:

Lift the receiver and press the redial button ◑. The stored redial number will now be dialled.

4.6 Adjusting the receiver volume

By means of the slide switch 🔕 🔔 🔔 on the right side of the telephone base you can choose the settings 🔔 (loud) or 🔔 (soft) to match the volume of the ringing tone to your requirements. If at any time you do not want to be disturbed, use the 🔕 (off) setting.

4.7 Storing speed dial numbers

Your telephone allows you to store 10 numbers for speed dialling. The numbers 0 to 9 on the number pad are used as memory locations.

1. Lift the receiver.
2. Press the [⇔] button and the display will show **SPEICHERN ?**.
3. Press the [⇔] button again. The cursor will flash and the display will show **SPEICHERPLATZ**.
4. Press the required memory location between 0 and 9 on the number pad.

- If the memory location is already occupied, the display will show the message **UEBERSCHREIBEN ?**.
- If you want to overwrite the memory location, press the [⇔] button again.
- If you do not want to overwrite the memory location, press the disconnect button once and repeat the entire process.

5. Now enter the required telephone number with a maximum of 22 digits.
6. Save with the [⇔] button. The display will show **GESPEICHERT !**.

4.8 Calling up speed dial numbers

To call a saved speed dial number, proceed as follows:

1. Lift the receiver.
2. Press the [→•] button and the required storage location between 0 and 9. The saved telephone number will be dialled directly.

5 Caller display (CLIP)

In the case of incoming calls, you can see who is calling you by means of the caller display facility. If this function is available on your line, the display shows you the caller's telephone number while the telephone is ringing. The display reports the following information when there is no telephone number available.

If the message **LEITUNGSFEHLER** appears in the display, the number has only been partially or incorrectly received.

If the message **NICHT VERFUEGBAR** or **FERNGESPRAECH** appears in the display, the particulars of the number are not available. This could have been an international call.

If the message **PRIVAT** appears in the display, the caller has suppressed the transmission of his telephone number or it was not possible to transmit the number.

In your absence, all calls will be saved in a caller list with date and time. Up to 99 numbers are saved in the caller list. When the list is full, the oldest number is always deleted from the list.

If calls are registered during your absence, this will be indicated in the display by the message **NEU** and the indicator light for new calls will flash.

5.1 Viewing the caller list

Use the [▼] button to move to the last phone number registered. You can then page through the caller list with [▲] and [▼] . All calls registered will be shown as follows:

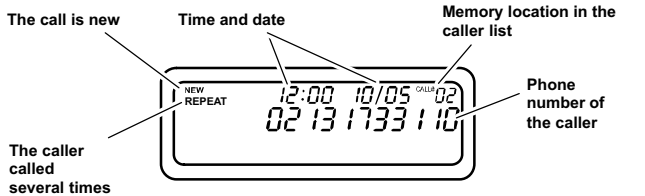

When you reach the last storage location in the list, the display will show the message **ENDE DER LISTE**.

Note: When all newly recorded numbers have been checked, the new call indicator light goes off and the **NEU** indicator in the display shows "**00**".

Note: If no button is pressed within 30 seconds, the caller list is no longer displayed and the display shows the current time and date once more along with the number of telephone numbers stored in

the caller list and the number of newly stored telephone numbers.

5.2 Dialling a telephone number directly from the caller list

You can dial telephone numbers directly from the caller list.

1. Select the required telephone number using the [▲] and [▼] buttons.
2. To dial the number, press the [☎].button.
3. If you have already lifted the receiver, the number will be dialled directly. If the receiver is in place, the message **HOERER ABNEHMEN**. will appear in the display.
4. Pick up the handset. The display will show the message **WAEHLEN ...** and the number will be dialed.

5.3 Deleting telephone numbers from the caller list

1. Select the telephone number from the caller list that you want to delete with the [▲] and [▼] buttons.
2. Press the delete button [C] once. The display will show the message **LOESCHEN ?**.
3. Now immediately press and hold the delete button [C] for 2 seconds. The number will be deleted and the display will now show another number from the caller list.

5.4 Deleting the entire caller list

1. Select any telephone number from the caller list.
2. Hold the [C] button pressed until the message **ALLES LOESCHEN ?** appears in the display.
3. Now immediately press and hold the [C] button again for 2 seconds until the message **KEINE ANRUFE** appears in the display.

6 Private Branch Exchanges / Supplementary Services

The [R] button on the handset is used in private branch exchanges and for taking advantage of supplementary services provided by telephone network provider.

6.1 R-button on Private Exchanges

If the telephone is connected to a private branch exchange, all the functions associated with the [R] button, such as transferring calls, automatic call back, etc., can be used. A private branch exchange requires a Flash time of 100 ms. The dealer where you purchased the exchange can provide information as to whether the telephone will work properly with the exchange.

6.2 R-button and supplementary services offered by your telephone network provider

Your AUDIOLINE telephone supports the most important supplementary services provided by your telephone network provider (e.g. brokering, call waiting, three-way conferencing, etc.). Please contact your telephone network provider with regard to enabling the supplementary services.

6.3 Dialling pause

In the case of private branch exchanges, it is necessary to dial a specific number (e.g. “9” or “0”) in order to obtain the dialling tone for an outside line. When using some older private branch exchanges, it takes a little time before the dialling tone becomes audible. Particularly in the case of such private branch exchanges, it is possible to insert an automatic pause after the number for the outside line so that the number can be dialled in a continuous process without having to wait for the dialling tone.

Press the [●] button once between dialling the number for the outside line and the actual phone number. After dialling the number for the outside line, the telephone waits 3 seconds before dialling the actual phone number.

7 Important information

7.1 Fault finding

Remove all extra telephone equipment and connect only the telephone directly to the telephone socket.

If the fault is still present, connect another telephone (if available) to the telephone socket. The results will show you whether the fault lies with the unit or with the telephone line.

7.2 Guarantee

AUDIOLINE equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply where the cause of equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of guarantee do not apply to the standard batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies resulting from material or production faults which occur during the period of guarantee will be eliminated free of charge. Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee. In the case of complaints, we reserve the right to repair or replace defect parts or provide a replacement device. Replacement parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the AUDIOLINE device together with the purchase receipt. All rights to claims under the terms of guarantee in accordance with this agreement must be asserted exclusively with regard to your sales outlet. Two years after the purchase and transfer of our products, claims under the terms of guarantee can no longer be asserted.

8 Important Notes on the Guarantee

The period of guarantee for the AUDIOLINE product begins on the date of purchase. Rights to claims under the terms of guarantee relate to deficiencies resulting from material or production faults. Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, normal wear and tear, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee.

CLAIMS UNDER THE TERMS OF GUARANTEE MAY ONLY BE ASSERTED TO THE RETAILER WHERE THE EQUIPMENT WAS PURCHASED, WHEREBY THE PURCHASE RECEIPT MUST ALSO BE SUBMITTED.

TO PREVENT UNNECESSARY LONG DELAYS, PLEASE DO NOT SEND EQUIPMENT UNDER COMPLAINT TO OUR OFFICE ADDRESS.

IN THE CASE OF QUESTIONS CONCERNING OPERATION OR THE TERMS OF GUARANTEE, PLEASE REFER TO THE OPERATING MANUAL OR CONTACT OUR HOTLINE:

0180 500 13 88 (Telekom cost at time of going to print: 12 ct/min)

AUDIOLINE GmbH
Neuss

Service Hotline 0180 500 13 88
(Telekom cost at time of going to print: 12 ct/min)
Internet: www.audioline.de - E-mail: info@audioline.de